

























НЕМЕДЛЕННО прекратите
эксплуатацию подъемника
при обнаружении повреждений
или постороннего шума.

| | |
|--|--|
| ROSSVIK | |
| Производитель: SHANGHAI JS CORP. LTD | |
| Адрес: 6B, HONGHUI MANSION 468 NORTH CAOXI ROAD, SHANGHAI 200030, P.R. CHINA | |
| Автоподъемник | |
| Модель | T4 |
| Состав комплекта | 1 - Автоподъемник; 2 - гидростанция |
| Дата производства | 03.2021 |
| Серийный номер | 2021030197 |
| номер коробавкомплекте | 1 из 2 |
|  2 000000 911489 > | |
|  | |

при обнаружении повреждения
или постороннего шума.

ROSSVIK

Производитель: SHANGHAI JS CORP. LTD

Адрес: 6B, HONGHUI MANSION 468 NORTH CAO XI
ROAD, SHANGHAI 200030, P.R. CHINA

Автоподъемник

| | |
|------------------------|--|
| Модель | T4 |
| Состав комплекта | 1 - Автоподъемник; 2 - гидростанция |
| Дата производства | 03.2021 |
| Серийный номер | 2021030197 |
| номер коробавкомплекте | 1 из 2 |



EAC













EAC

CE

Model: S-0PT-4T

Serial No: SG09393

Lift capacity: 1000KG

Lift height: 1850MM

Power supply: 2CV

Power of motor: 2.2KW

Machine weight: 55KG

Date: 2020.11











ERC **CE**

| | | | |
|-----------------|----------|-----------------|---------|
| Model: | S-10T-11 | Serial No: | SG09395 |
| Lift capacity: | 400KG | Lift height: | 1850MM |
| Power supply: | 220V | Power of motor: | 2.2KW |
| Machine weight: | 560KG | Date: | 2020-11 |



EAC **CE**

| | |
|------------------------------|------------------------------|
| Model: <u>SG04C20</u> | Serial No: <u>SG04C20</u> |
| Lift capacity: <u>1000kg</u> | Lift height: <u>1850MM</u> |
| Power supply: <u>220V</u> | Power of motor: <u>2.2KW</u> |
| Machine weight: <u>500kg</u> | Date: <u>2020.11</u> |





Lift to be used
by trained operator
only

Authorized personnel
only in lift area

CAUTION

CAUTION



Use vehicle
manufacturer's
lift points

Always use
safety stands when
removing or installing
heavy components

CAUTION

CAUTION



Height extender's
weight capacity
may vary
from original
capacity

Auxiliary adapters
may reduce
jack capacity

The messages and pictographs shown are
generic in nature and are meant to generally
represent hazards common to all automotive
lifts regardless of lift style

**SAFETY
INSTRUCTIONS**

**SAFETY
INSTRUCTIONS**



Read operating
and safety manuals
before using lift

Proper maintenance
and inspection
is necessary
for safe operation

**SAFETY
INSTRUCTIONS**



Do not operate
a damaged lift

The messages and
pictographs shown
are generic in nature
and are meant to
generally represent
hazards common to
all automotive lifts
regardless of specific
style

WARNING







